

# INSTRUCTION MANUAL

# GR16 C.Q.W. WASP



**TOP FIVE**  
 FUTURE INNOVATION  
 FINEST QUALITY  
 FAST SERVICE  
 FREE ITEMS  
 FAIR PRICE



**SPECIAL SHOOTING**  
Used for precision firing.



**COMMON SHOOTING**  
Used for full automatic firing.



**WINDAGE KNOB** (left / right adjustment)  
**ELEVATION KNOB** (up / down adjustment)

## REAR SIGHT ADJUSTMENT

**CAUTION**  
 Keep the selector on Safe mode until you are actually ready to shoot.



### WARNING !!

- Adult supervision required.
- Always wear eye protection when using this product.
- Misuse or careless handling of this product may cause injury.
- May be hazardous up to 50 meters.
- This product is intended for users 18 years or older.
- Read all instructions before using this product.
- The buyer and the user of this product shall adhere to all local laws regulating the usage and the ownership of airsoft guns.

## WINDAGE ADJUSTMENT KNOB



Detachable rear sight.



Turn the knobs counterclockwise to disassemble the rear sight.




Take off the rear sight to install other accessories.


## MAINTENANCE



Remove the magazine.

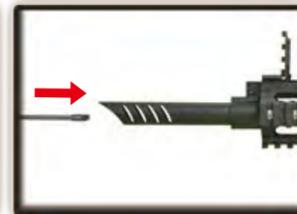

Return the hop up dial to normal position and insert the cleaning rod from the lead edge of the inner barrel.

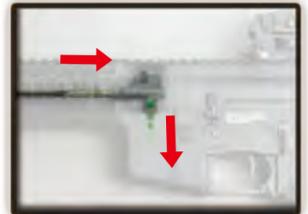

Be aware to have the rod facing down and reaching to the end, and remove clogged pellets.

## OPTIONAL PARTS



G-12-006  
CD 13-TRT30GD



G-03-065  
Forward Grip-BK (ABS injection)

## FOLDING FRONT SIGHT



Folding the front sight.



Press the plate back.



Press against the folding front sight.

## TROUBLE SHOOTING



Adjust screw when the gear noise becomes shrilly.

The screw at bottom of the grip. Please use the screwdriver to adjust.



No operation

Check the wire set contact with motor.




No operation

Check the battery and connector.

## PARTS LIST

<b>GR16 Wasp- 01</b> Wasp front kit	<b>GR16 Wasp- 16</b> Switch Plate
<b>GR16 Wasp- 02</b> Rail system set	<b>GR16 Wasp- 17</b> Hi-cap 450R magazine
<b>GR16 Wasp- 03</b> Rear sight base set	<b>GR16 Wasp- 18</b> Lower receiver set
<b>GR16 Wasp- 04</b> Rear sight set	<b>GR16 Wasp- 19</b> Trigger guard set
<b>GR16 Wasp- 05</b> Hop-up set	<b>GR16 Wasp- 20</b> Charging upper cover
<b>GR16 Wasp- 06</b> Slip ring set	<b>GR16 Wasp- 21</b> Rear frame lock pin set
<b>GR16 Wasp- 07</b> Inner barrel	<b>GR16 Wasp- 22</b> Grip
<b>GR16 Wasp- 08</b> Upper receiver set	<b>GR16 Wasp- 23</b> Motor set
<b>GR16 Wasp- 09</b> Charging handle set	<b>GR16 Wasp- 24</b> Grip bottom set
<b>GR16 Wasp- 10</b> Port cover set	<b>GR16 Wasp- 25</b> Patriot battery stock
<b>GR16 Wasp- 11</b> Front frame lock pin set	<b>GR16 Wasp- 26</b> Gear box set
<b>GR16 Wasp- 12</b> Bolt catch set	<b>GR16 Wasp- 27</b> Barrel base set
<b>GR16 Wasp- 13</b> Selector lever set	<b>GR16 Wasp- 28</b> Blow back pneumatic piston
<b>GR16 Wasp- 14</b> Magazine catch set	<b>GR16 Wasp- 29</b> Charging plate
<b>GR16 Wasp- 15</b> Stock washer	<b>GR16 Wasp- 30</b> Selector plate

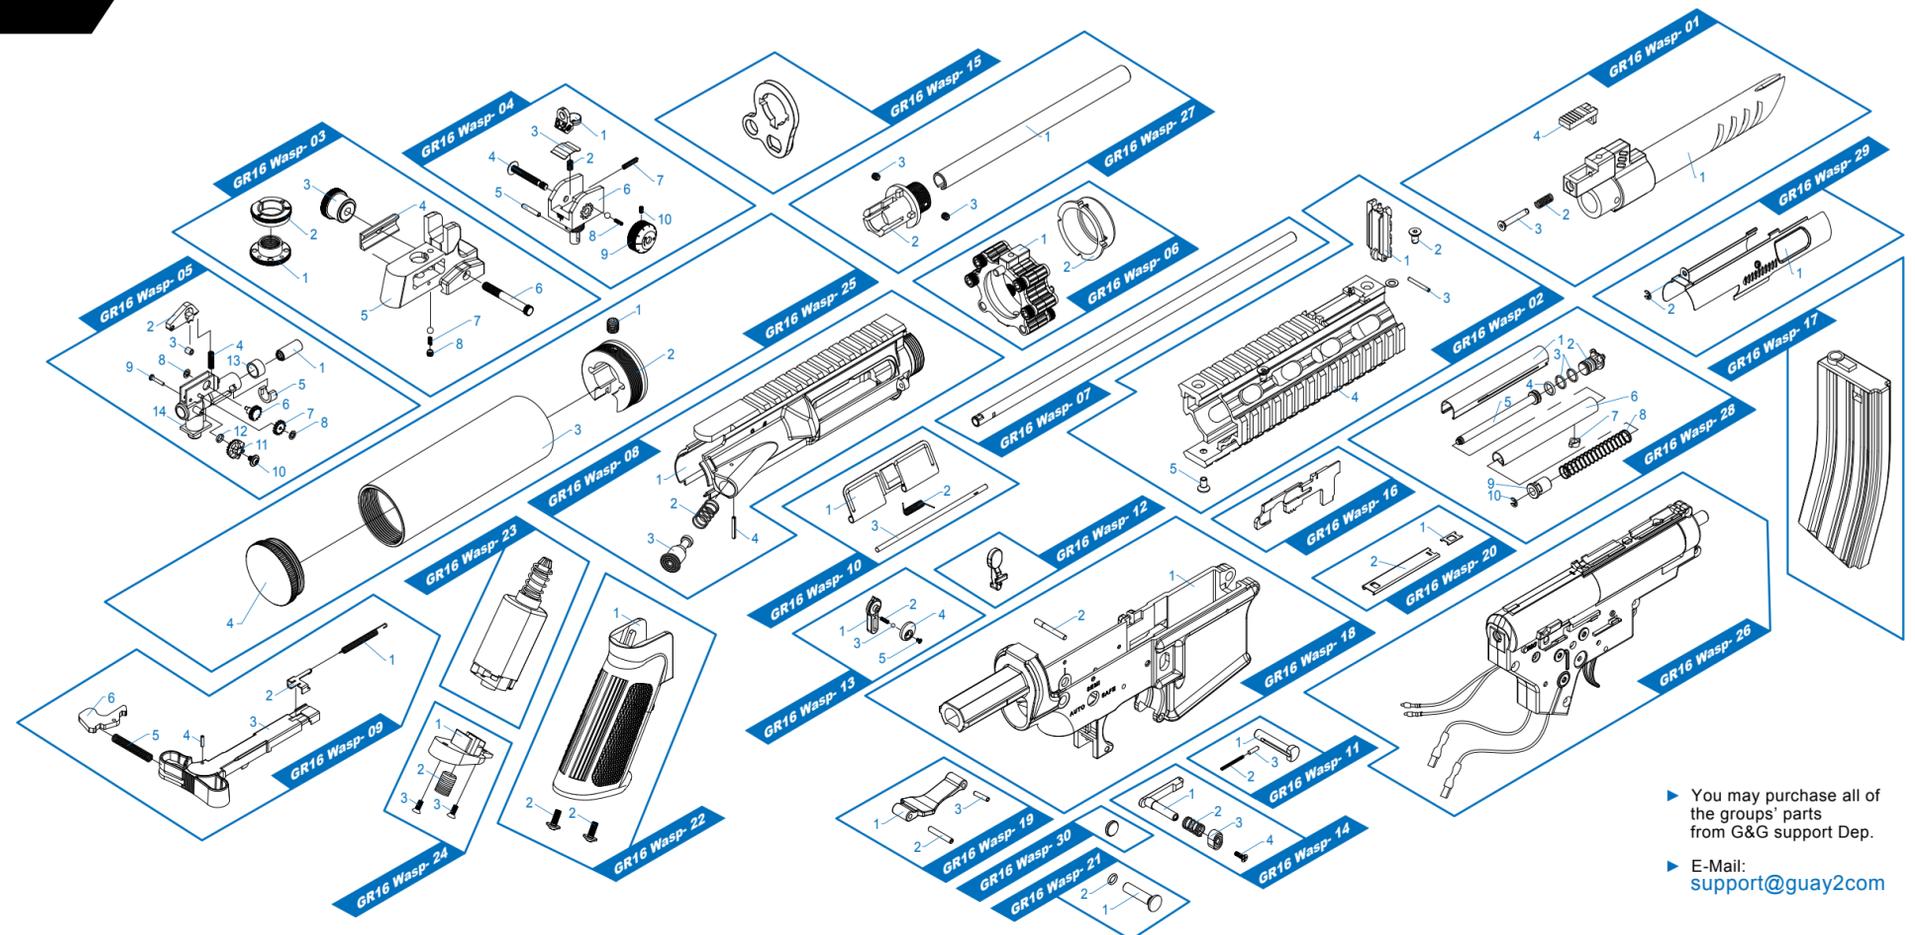

## MANUFACTURED BY G&G ARMAMENT

### TAIWAN

Sales Dept. | sales@guay2.com , b2b@guay2.com  
 Technology Support Dept. | support@guay2.com  
 PR Dept. | pr@guay2.com

**Chang Hua** Headquarter  
 Tel : +886-4-798-9000 Fax : +886-4-798-9900  
 No.999, Zhonghua Rd. Shengang Township,  
 Changhua County 50955, Taiwan (R.O.C.)

**Taipei**  
 Tel : +886-2-2692-2000 Fax : +886-2-2692-4000  
 11F-3., No.27, Lane 169, Kangning St. Shijr City,  
 Taipei County 22180, Taiwan (R.O.C.)

### U.S.A.

E-mail | sales101@guay2.com

**Los Angeles**  
 Tel : +1-626-581-0101  
 Fax : +1-626-581-1011  
 1122 Coiner Court,  
 City of Industry,  
 CA 91748 (U.S.A.)

Dealer

► You may purchase all of the groups' parts from G&G support Dep.

► E-Mail: support@guay2.com