



WWW.GUAY2.COM
G&G ARMAMENT
AIRSOFT GUNS & ACCESSORIES



INSTRUCTION MANUAL

CM16 300BOT

FIRING MODE & SAFETY



Safety On
The gun will not fire



Semi Auto
Single shot



Full Auto
Automatic firing

CAUTION

- This product is suggested for 18 year-old users or older.
- Wear goggles while shooting.
- Incorrect use may cause injury or death.
- Never point at humans and animals with the airsoft guns.
- Read the whole manual before using the replica.
- Buyers and users should comply with the laws and rules defined by the local authority.



Recommended battery type
G-11-056
NI-MH 9.6V 1600 mAh

CHARGING BATTERY



1. Charge up the battery.
2. Charging will be completed after 3 hours.



Pull out the butt plate from the upper part.



Take out the battery stop.



Connects the battery until connector clicks into place.



Insert the battery into stock.



Reinstall the battery cover and butt plate.

CAUTION

1. Use high quality battery with the CE approval to avoid any unnecessary damage on the product.
2. Use either 8.4V or 9.6V battery only, battery with voltage too high or too low might damage the product.
3. Remove the battery from the product when it is not in use.
4. Do not wet nor incinerate the battery, nor to deform the terminal.

LOADING MAGAZINE



1. Open the top plate of magazine.
2. Load G&G 5.95mm BB pellets into the magazine until chamber is full.
3. Insert the magazine until it clicks.
4. Turn the winding wheel on the bottom of the magazine to tighten the spring. This will allow the BBs to feed through the top of the magazine.

CAUTION

It is strongly recommended to use G&G BB pellets only. Using low quality BB pellets will damage the product and void warranty.

HOP-UP ADJUSTMENT


CAUTION

Do not catch your fingers in the dummy bolt. Never hold the gun sideways as the BB pellets will curve right or left.

- ❌ **Too much Hop-up.**
(Turn the adjustment lever toward **Normal** to correct the upward trajectory.)

Best Position.

- ❌ **Not enough Hop-up.**
(Turn the adjustment lever toward **Hop** to correct downward trajectory.)

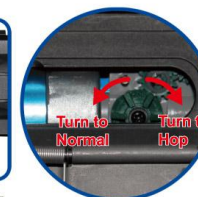

INSTRUCTION MANUAL

CM16 300BOT



MAINTENANCE



Remove the magazine.



Return the hop up dial to normal position and insert the cleaning rod from the lead edge of the inner barrel.



Be aware to have the rod facing down and reaching to the end, and remove clogged pellets.

TROUBLE SHOOTING



Adjust screw when the gear noise becomes shrilly

The screw at bottom of the grip. Please use the screwdriver to adjust.



No operation

Check the wire set contact with motor.

FRONT SIGHT ADJUSTMENT



Front Sight - Flip up



Front Sight - Press the button and Fold down

RETRACTABLE STOCK



Press the stock release lever to unlock.



Adjust the position (6 position).

REAR SIGHT ADJUSTMENT



Rear Sight - Flip up



Windage knob (left / right adjustment)
Elevation knob (up / down adjustment)

PARTS LIST

CM16 300BOT 01 Dummy gas tube
CM16 300BOT 02 Gear box
CM16 300BOT 03 Barrel set
CM16 300BOT 04 wire
CM16 300BOT 05 Magazine
CM16 300BOT 06 Upper Receiver Set
CM16 300BOT 07 Lower Receiver Set
CM16 300BOT 08 Rail system set
CM16 300BOT 09 Grip
CM16 300BOT 10 Front Sight

CM16 300BOT 11 Motor
CM16 300BOT 12 Charging handle set
CM16 300BOT 13 Butt stock set
CM16 300BOT 14 Inner barrel set
CM16 300BOT 15 Rear Sight
CM16 300BOT 16 Grip Bottom plate
CM16 300BOT 17 Flash Hider
CM16 300BOT 18 Stock Tube
CM16 300BOT 19 Sling Swivel Mount

You may purchase all of the groups' parts from G&G support Dep.
E-Mail: support@guay2.com



G&G SINCE 1986
ARMAMENT
WWW.GUAY2.COM

Sales Dept. | sales@guay2.com , b2b@guay2.com
Technology Support Dept. | support@guay2.com
PR Dept. | pr@guay2.com

Chang Hua Headquarter
Tel : +886-4-798-9000 Fax : +886-4-798-9900
No.999, Zhonghua Rd. Shengang Township, Changhua County 50955, Taiwan (R.O.C.)

Taipei
Tel : +886-2-2692-2000 Fax : +886-2-2692-4000
11F-3, No.27, Lane 169, Kangning St. Shijr City, Taipei County 22180, Taiwan (R.O.C.)

