



INSTRUCTION MANUAL



HB16 MOD 0 BLK/DST



WARNING !!

- Stop shooting when the battery power is low.
 - Do not adjust the motor without authorization or by certified technician.
 - Adult supervision required.
 - Always wear eye protection when using this product.
 - Misuse or careless handling of this product may cause injury.
 - May be hazardous up to 50 meters.
- This product is intended for users 18 years or older.
 - Read all instructions before using this product.
 - The buyer and the user of this product shall adhere to all local laws regulating the usage and the ownership of airsoft guns.



RECOMMENDED BATTERY TYPE
G-11-056
 NI-MH 9.6V 1600 mAh

FIRING MODE & SAFETY



SAFETY ON
Trigger will be locked.



SEMI AUTO
Single shot.



FULL AUTO
Automatic firing.

CHARGING & INSTALLING BATTERIES

CAUTION

1. Please use quality battery with the CE approval, to avoid any unnecessary damage on the product.
2. Please use either recommended batteries. Defected or low quality batteries might damage the product.
3. Remove the battery from the product when it is not in use.
4. Do not wet nor incinerate the battery, nor to deform the terminal.



1. Charge up the battery.
2. Charging will be completed after 3 hours.



1. Pull and hold down the delta ring.
2. Remove the lower handguard.



Connect the battery with the connector until it clicks.



Reinstall the lower handguard.

EXTRA STORAGE SPACE



Press the button.



Pull out the grip for the extra storage space.

SETTING MAGAZINE

CAUTION

It is strongly recommended the use of G&G BB pellets only. Using low quality BB pellets will shorten product life span and void product warranty.



Open the magazine top plate.



Pour G&G 5.95mm BBs into the chamber and close the plate when the chamber is full.



Turn the winding wheel on the bottom of the magazine to tighten the spring. This will allow the BBs to feed through the top of the magazine.



Insert the magazine into the Airsoft gun until it clicks into place.

DUMMY BOLT



Pulling the charging handle will take the bolt back and open the port cover.



Press the bolt catch lever to release the dummy bolt.


WARNING !!

The heavy bolt system will speed up the release of dummy bolt. Do not catch your fingers in the bolt.

HOP-UP ADJUSTMENT

CAUTION

Do not catch your fingers in the dummy bolt. Never hold the gun sideways as the BB pellets will curve right or left.

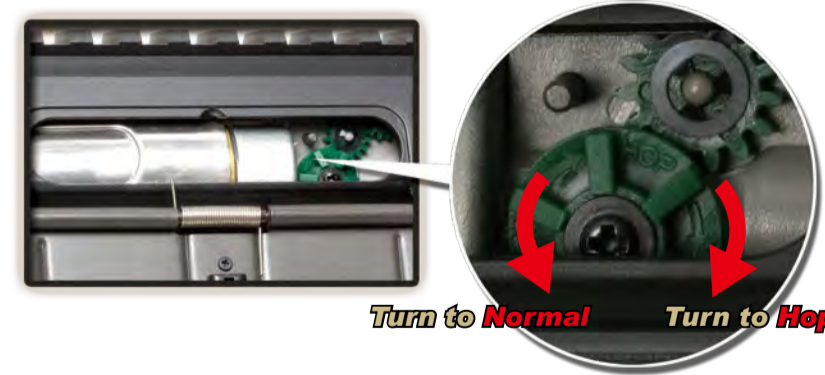

Too much Hop-up. (Turn the adjustment dial toward Normal)

Best Position. O

Not enough Hop-up. (Turn the adjustment dial toward Hop) or Too much Hop-up. (Turn the adjustment dial toward Normal)



HB16 MOD 0 BLK/DST

INSTRUCTION MANUAL



TOP FIVE
 FUTURE INNOVATION
 BEST QUALITY
 FAST SERVICE
 FREE ITEMS
 BEST AIR PRICE

⚠ WARNING !!

- Adult supervision required.
- May be hazardous up to 50 meters.

- Stop shooting when the battery power is low.
- Do not adjust the motor without authorization or by certified technician.
- Always wear eye protection when using this product.
- Misuse or careless handling of this product may cause injury.

- This product is intended for users 18 years or older.
- Read all instructions before using this product.
- The buyer and the user of this product shall adhere to all local laws regulating the usage and the ownership of airsoft guns.

RETRACTABLE GOS-V2 STOCK



Pull the release lever to adjust the position of the stock. (6 positions).




Pull the locking lever until it clicks into place to secure the position of the stock.


MAINTENANCE



Press the magazine release button and slide your magazine out.

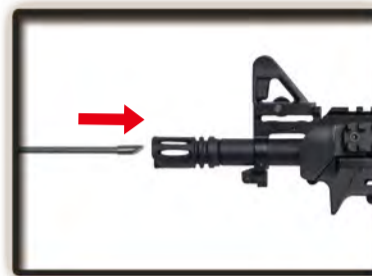

Return the hop up dial to normal position and insert the cleaning rod from the lead edge of the inner barrel.

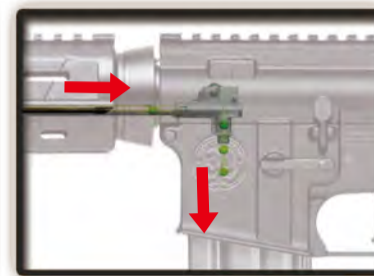

Be sure to have the rod facing down and reaching to the end. Remove clogged pellets.

TROUBLE SHOOTING



Adjust screw when the gear noise becomes shrilly. Use a screwdriver to adjust the screw at the bottom of the grip.



No operation. Check the wire set contact on the motor.



No operation. Make sure the battery is fully charged.

MOVABLE & OPTIONAL PARTS



Set to an appropriate position.



Fasten the knob.

FRONT SIGHT ADJUSTMENT



Turn the knob counterclockwise.



Remove the front sight post.



You can install accessories onto the rail.


REAR SIGHT ADJUSTMENT



Press down the button to fold the rear sight.



Remove the screw by turning counterclockwise.

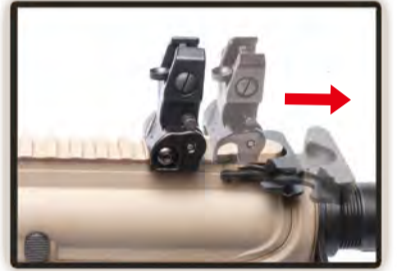

Pull the charging handle to the rear and remove the rear sight off you G&G Armament gun.

PARTS LIST

HB16 MOD0 - 01	Flash Suppressor	HB16 MOD0 - 17	Magazine
HB16 MOD0 - 02	Lower Handguard Set	HB16 MOD0 - 18	Lower Receiver Set
HB16 MOD0 - 03	Upper Handguard Set	HB16 MOD0 - 19	Trigger Guard Set
HB16 MOD0 - 04	Outer Barrel Set	HB16 MOD0 - 20	Selector Plate
HB16 MOD0 - 05	Hop Up Set	HB16 MOD0 - 21	Rear Frame Lock Pin Set
HB16 MOD0 - 06	Delta Ring	HB16 MOD0 - 22	Grip Set
HB16 MOD0 - 07	Inner Barrel	HB16 MOD0 - 23	Motor
HB16 MOD0 - 08	Upper Receiver Set	HB16 MOD0 - 24	Grip Bottom Set
HB16 MOD0 - 09	Heavy Bolt Set	HB16 MOD0 - 25	GOS-V2 Stock Set
HB16 MOD0 - 10	Port Cover Set	HB16 MOD0 - 26	Gear Box Set
HB16 MOD0 - 11	Front Frame Lock Pin Set	HB16 MOD0 - 27	Detachable Front Sight Set
HB16 MOD0 - 12	Bolt Catch Set	HB16 MOD0 - 28	Right Selector Cap
HB16 MOD0 - 13	Selector Lever Set	HB16 MOD0 - 29	Wire
HB16 MOD0 - 14	Magazine Catch Set	HB16 MOD0 - 30	Rear Sight
HB16 MOD0 - 15	Sling Swivel Mount	HB16 MOD0 - 31	Handguard Retainer
HB16 MOD0 - 16	Stock Tube	HB16 MOD0 - 32	Imitation Gas Tube

TAIWAN

Sales Dept. | sales@guay2.com , b2b@guay2.com
 Technology Support Dept. | support@guay2.com
 PR Dept. | pr@guay2.com


Chang Hua Headquarter
 Tel : +886-4-798-9000 Fax : +886-4-798-9900
 No.999, Zhonghua Rd. Shengang Township,
 Changhua County 50955, Taiwan (R.O.C.)

Taipei
 Tel : +886-2-2692-2000 Fax : +886-2-2692-4000
 11F-3., No.27, Lane 169, Kangning St. Shijr City,
 Taipei County 22180, Taiwan (R.O.C.)

Dealer

▶ The grouped parts may all be purchased from the G&G Support Department.

▶ E-Mail: support@guay2com

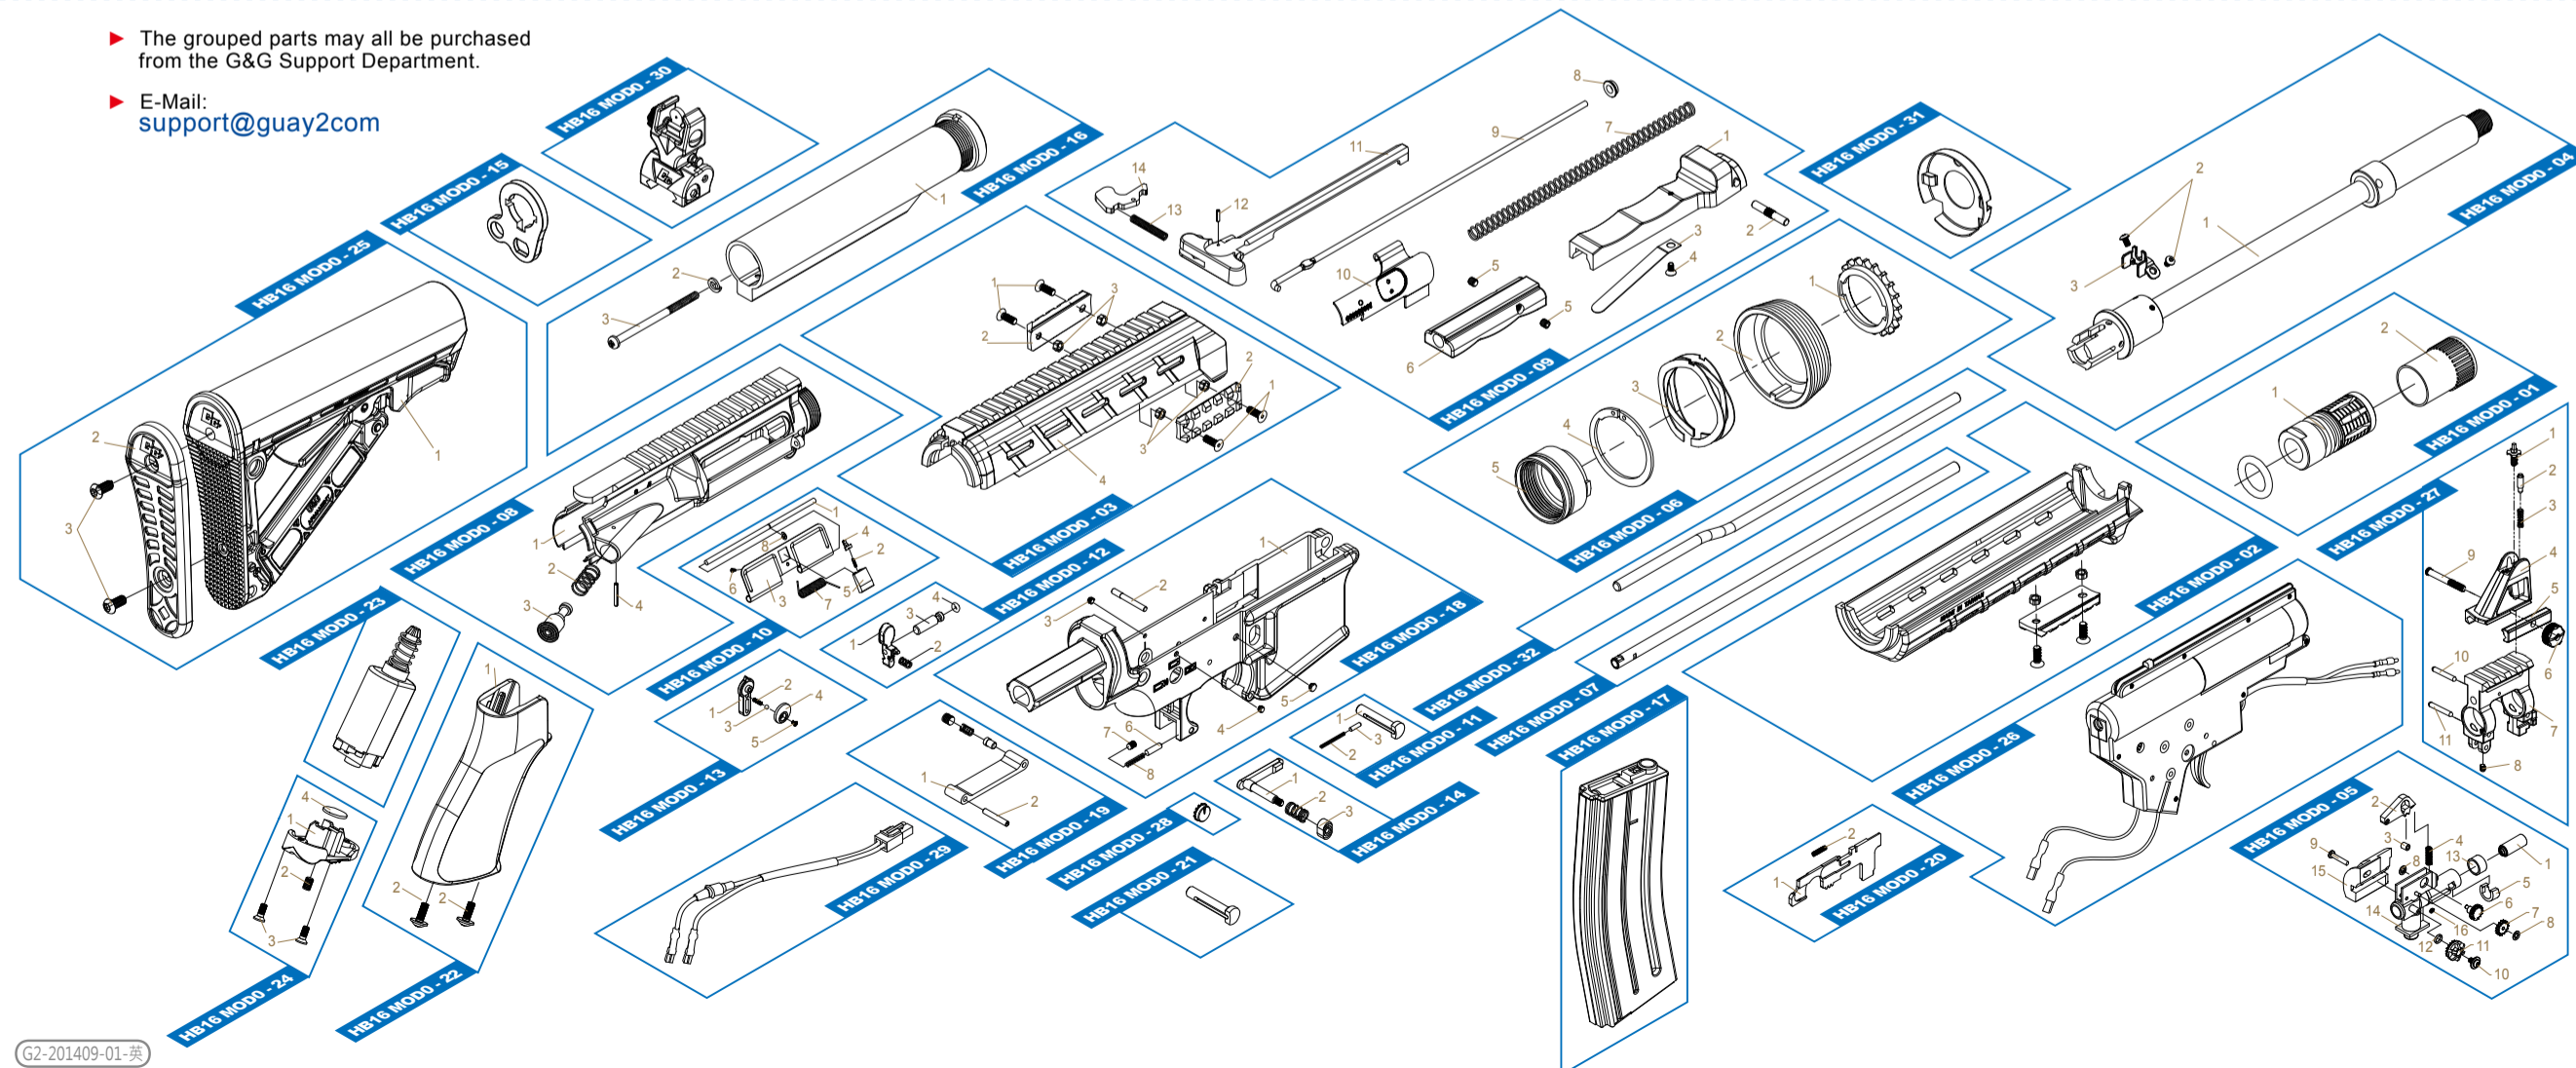

G2-201409-01-英