

INSTRUCTION MANUAL

CM16 MOD 0 UPI



MAINTENANCE



Remove the magazine.



Return the hop up dial to normal position and insert the cleaning rod from the lead edge of the inner barrel.




Insert the rod facing down and reaching to the end, and remove clogged pellets.

REAR SIGHT ADJUSTMENT



Windage knob (left / right adjustment)
Elevation knob (up / down adjustment)

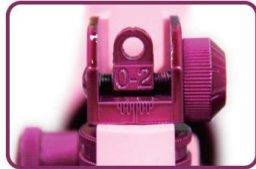

Common Shooting
Used for full automatic firing.



Special Shooting
Used for precision firing.

TROUBLE SHOOTING

SYMPTOM	POTENTIAL	CORRECTIVE
No operation at all	Selector lever is set to safety.	Set the selector lever to Semi.
	Battery is not charged.	Charge the battery.
	Battery connector is disconnected.	Attach the connector.
	Battery connectors (and) are reversed.	Connect the connector correctly (check the fuse)
	Motor life expired (50,000 to 60,000 rounds) or poor electrical connection.	Replace the dead motor (can be purchased from local dealer or directly G&G). Check and repair the contacts.
Although motor is revolving, no pellet can be fired	Pellets are clogged inside the magazine.	Insert the charging rod into the magazine and move up and down a few times to remove clogged pellets.
	Pellets are clogged in the chamber.	Remove clogged pellets by using the cleaning rod.
	Faulty gear.	Purchase the replacement gear from your dealer or G&G and repair.
Shooting distance becomes shorter	Damaged or worn chamber set.	Mount the replacement parts (Purchasing from your dealer or G&G).
	Damaged or worn piston set (O-ring, piston spring).	Use the cleaning rod and clean the inner barrel.
	Something is jammed in the inner barrel.	Use the genuine G&G Pellets.
	Faulty BB pellets (too small or heavy).	Shotsage of silicone oil.
	Shotsage of silicone oil.	Drops few drops of silicone oil from upper the chamber.
Too loud operating noise	Gear problem caused by too many blank firing.	Consult your dealer or G&G for overhaul maintenance, part replacement (gear, etc.) or repair.
	Worn or damaged gear.	
	Gear problem caused by too many blank firing.	
Pellets being fallen out from barrel end	Damaged or worn chamber set.	
	No hop setting.	Turn the hop adjustment lever toward Hop.
	Faulty BB Pellets (too small or heavy).	Use the G&G Pellets.
If gun gets wet	Stop operation immediately, disconnect the battery, wipe off water from inside the main body and the battery. After completely dry, carry out trial firing. If the unit is not operational, please contact your local dealer for repair.	


PARTS LIST

CM16 MOD 0 UPI 01 Stock set
CM16 MOD 0 UPI 02 Buffer tube
CM16 MOD 0 UPI 03 Charging handle set
CM16 MOD 0 UPI 04 Sling swivel
CM16 MOD 0 UPI 05 Upper Handguard Set
CM16 MOD 0 UPI 06 Handguard Retainer
CM16 MOD 0 UPI 07 Wire
CM16 MOD 0 UPI 08 Port Cover Set
CM16 MOD 0 UPI 09 Upper Receiver Set
CM16 MOD 0 UPI 10 Rear sight base set

CM16 MOD 0 UPI 11 Imitation Gas Tube
CM16 MOD 0 UPI 12 Rear sight set
CM16 MOD 0 UPI 13 Detachable Front Sight Set
CM16 MOD 0 UPI 14 Lower Receiver Set
CM16 MOD 0 UPI 15 Lower Handguard Set
CM16 MOD 0 UPI 16 Inner Barrel
CM16 MOD 0 UPI 17 Selector Plate
CM16 MOD 0 UPI 18 Gear Box Set
CM16 MOD 0 UPI 19 Delta Ring

CM16 MOD 0 UPI 20 Outer Barrel Set
CM16 MOD 0 UPI 21 Grip Bottom Set
CM16 MOD 0 UPI 22 Motor
CM16 MOD 0 UPI 23 Hop Up Set
CM16 MOD 0 UPI 24 Magazine
CM16 MOD 0 UPI 25 Grip Set
CM16 MOD 0 UPI 26 Flash Suppressor

► The grouped parts may all be purchased from the G&G Support Department.
► E-Mail: support@guay2com

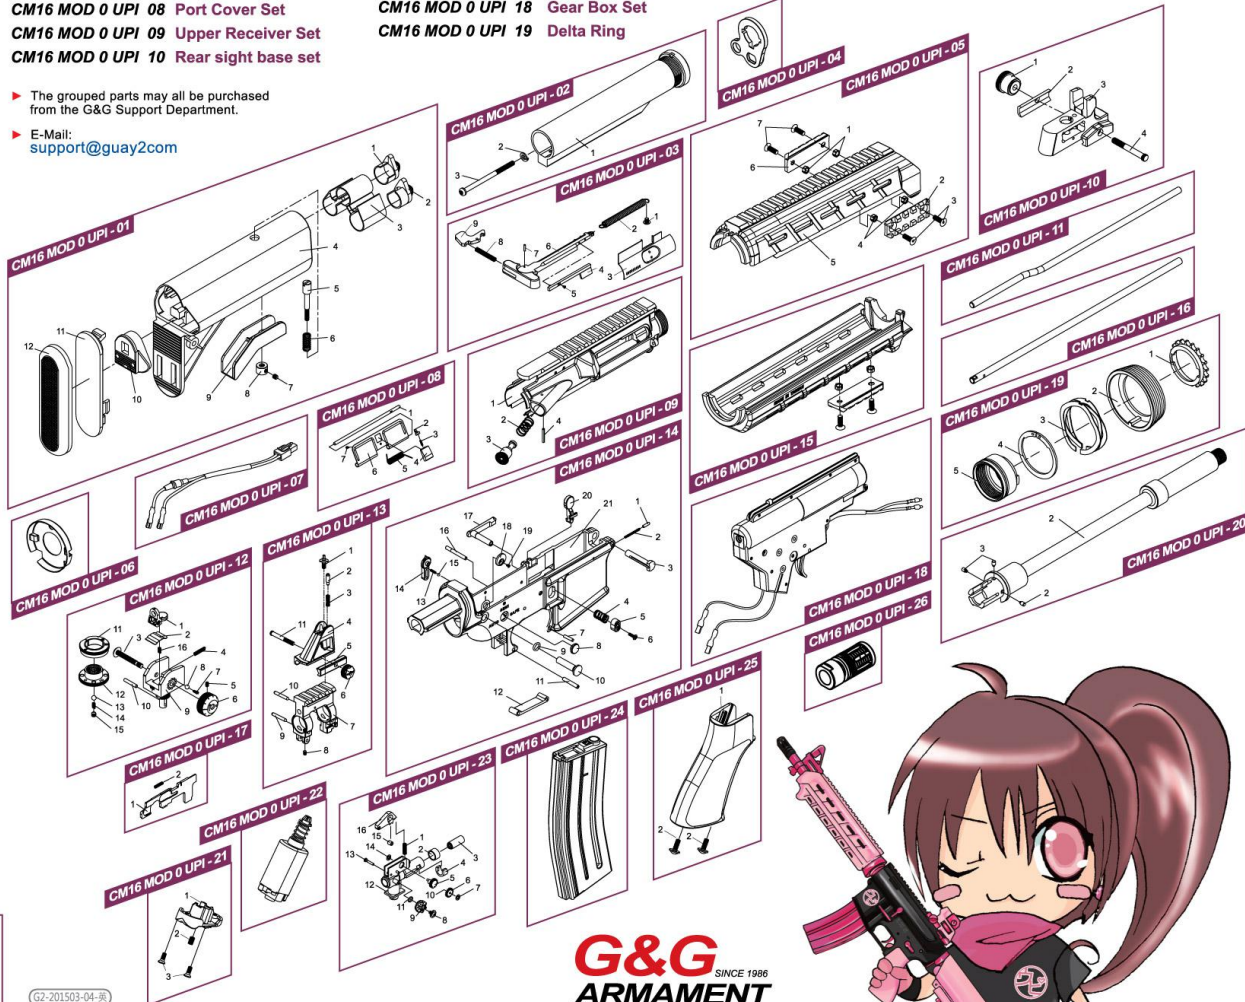

TAIWAN

Sales Dept. | sales@guay2.com , b2b@guay2.com
Technology Support Dept. | support@guay2.com
PR Dept. | pr@guay2.com

Chang
Hua
Headquarter

Tel : +886-4-798-9000 Fax : +886-4-798-9900
No.999, Zhonghua Rd. Shengang Township,
Changhua County 50955, Taiwan (R.O.C.)

Taipei

Tel : +886-2-2692-2000 Fax : +886-2-2692-4000
11F-3., No.27, Lane 169, Kangning St. Shijr City,
Taipei County 22180, Taiwan (R.O.C.)

Dealer

G2-201503-04-英

G&G SINCE 1986
ARMAMENT
WWW.GUAY2.COM